


## Update Diamond with the USB stick *By Janice Henning*

Download the file from Viking. [http://www.husqvarnaviking.com/global/6953\\_14369.htm](http://www.husqvarnaviking.com/global/6953_14369.htm)


I download it to a folder on my computer called “downloads”.

I open the “windows explorer” to find the downloaded file. Then unzip the file to see the “exe” file.

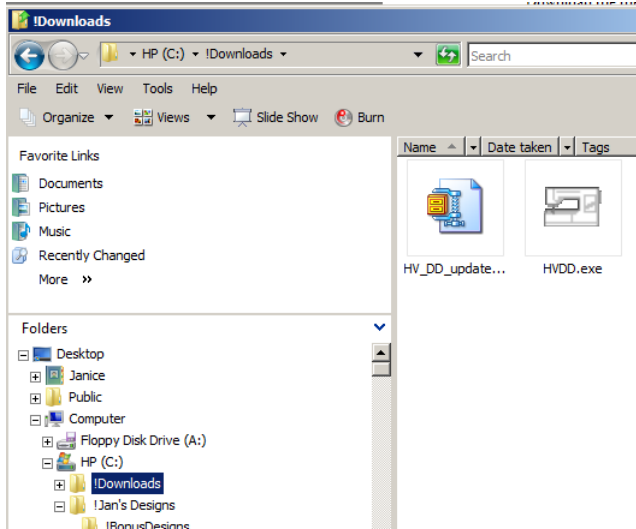


I double click on the HVDD.exe file to start the wizard.


This screen opens and I click on “next”. I choose “USB embroidery stick”.

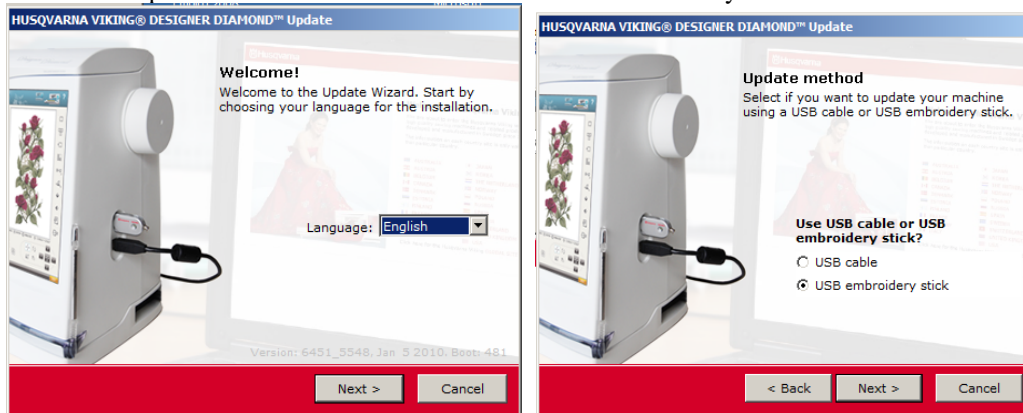


I choose to clear the disk and my stick drive shows as L. Yours may differ.

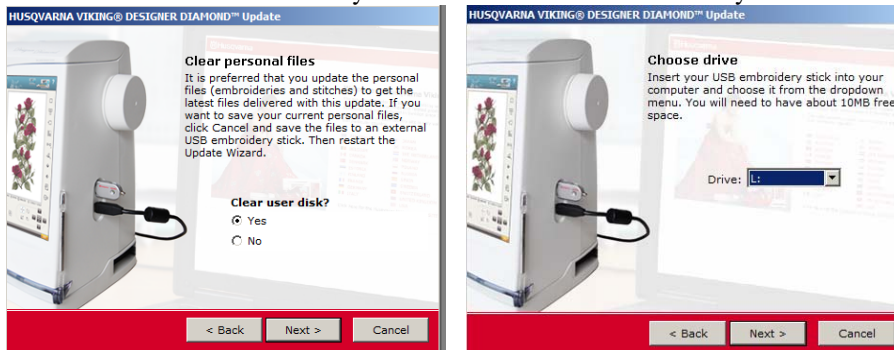

First a screen appears showing “preparing USB stick” and then tell you it’s done.

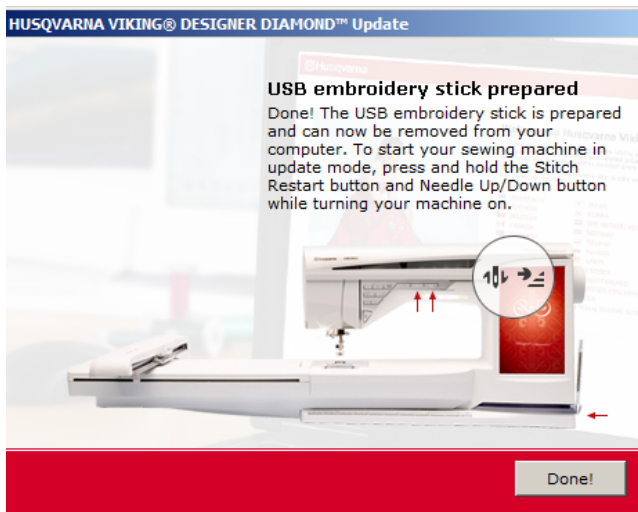


I left the stick in the computer so I could show you what is on the stick now. I had the “Windows Explorer” open and I clicked on the drive that is holding the stick and you see the file on the right side.

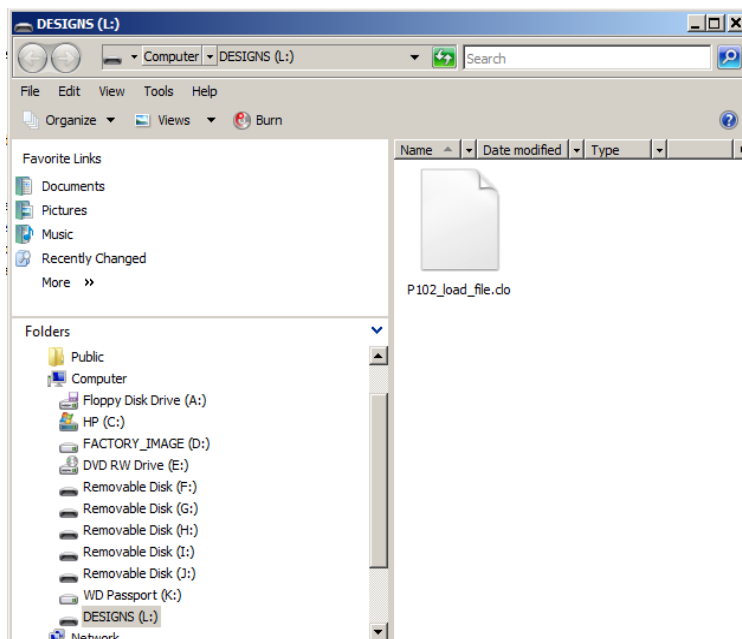


You insert it in your Diamond with the machine OFF. Hold down the **“restart and Needle/up/down”** buttons while turning on. This puts it in the update mode.



Read the screen and it tells you hold down the “reverse” button until you see “release reverse button.

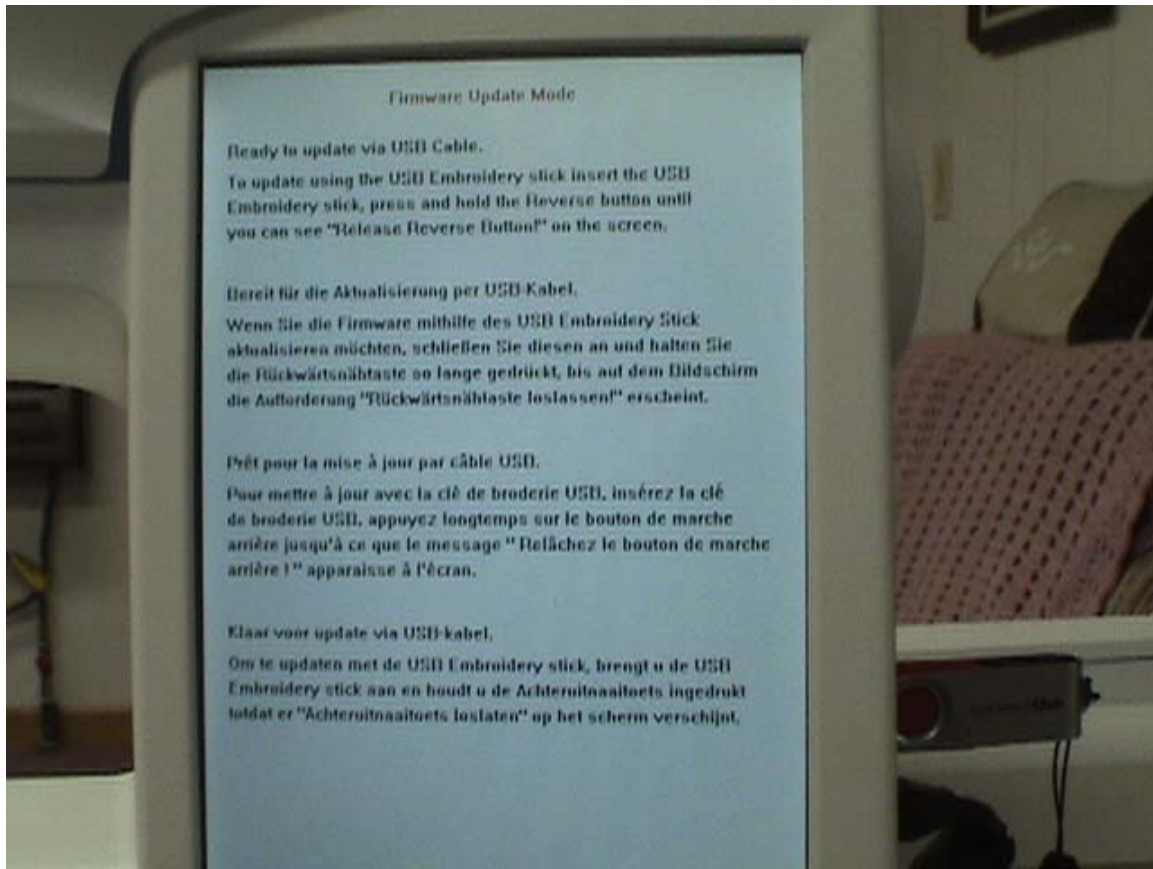

Then this screen will appear and tell you to release the reverse button.



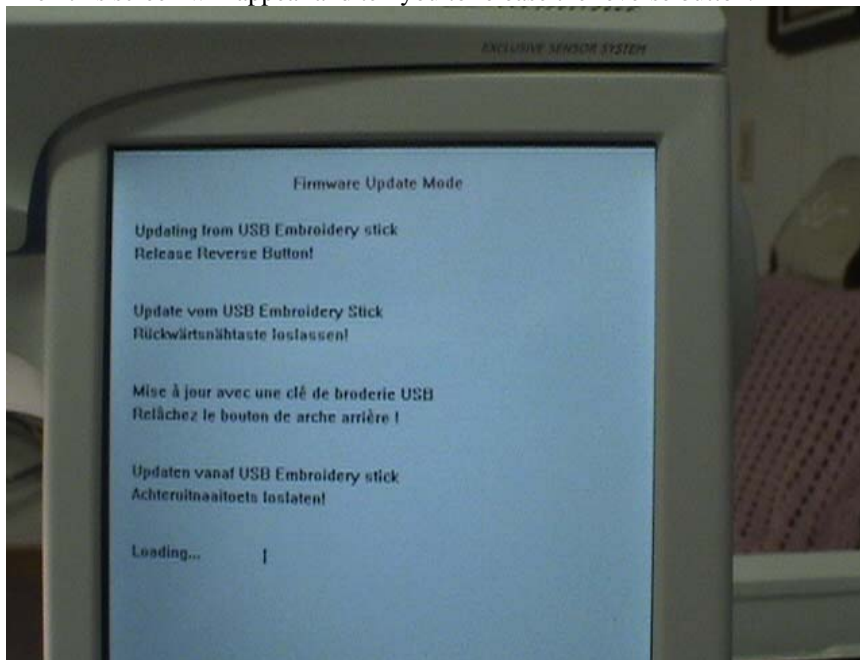


The programming starts.

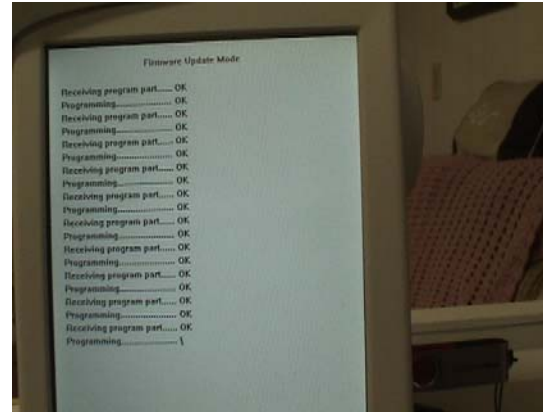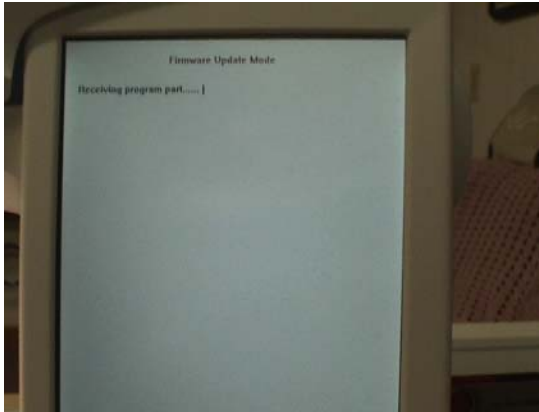

When finished the machine will shut down and restart.

Touch the “start button” (Diamond) and touch the “I” and touch the heart icon.

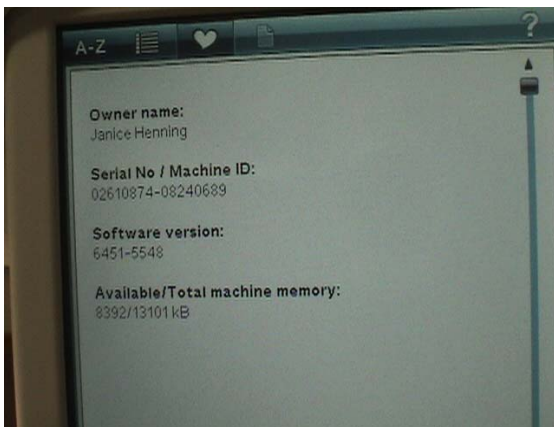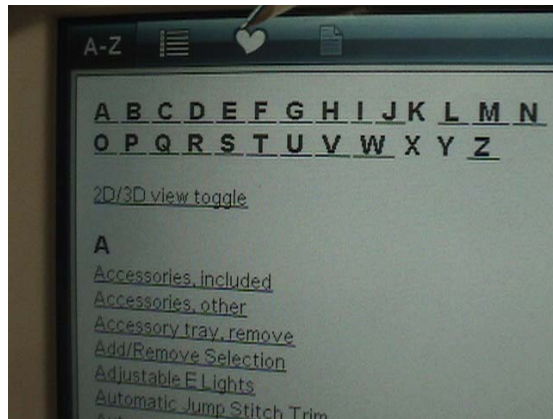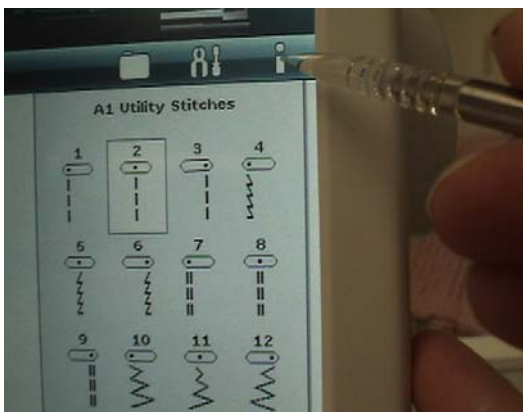

The new version will show under “software version”.