


## Picot Edging using Spanish Hemstitch Foot

I love figuring out little picot laces for collars, cuffs, Tea Towels, pillowcases, etc. I used 12 Wt. thread in the bobbin and on top. .

I used the Spanish hemstitch foot and put fabric on the left side with a folded edge and then put 2 layers of Aqua Mesh on the right side and butted both up against the divider on the plate and used some stitches.

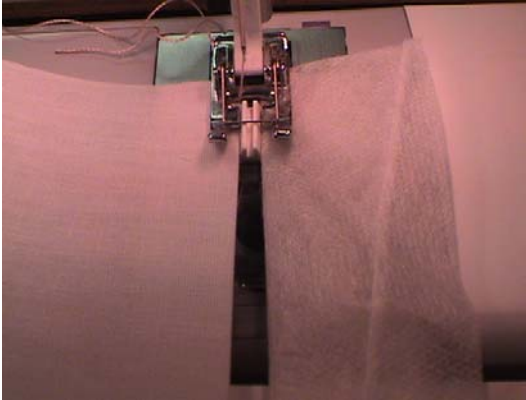


I turn the hand wheel to bring up the bobbin thread and then hold the top and bobbin threads down with my finger when first starting and then after it makes the locking stitch, I clip off the excess.

When I choose the stitch, I look at the picture of the foot on the screen and if I see the dot for the first stitch is in the middle, I first choose the A1 stitch so the locking stitch will be on the fabric. Then I choose the actual stitch I want and **touch the "fix"** to turn it off because I don't need it to fix in the mid air if the stitch starts in the middle.

If the stitch starts on the left or the right, then you won't need to use the A1 stitch. When I get to the end of the fabric, I make sure the needle is on the right or the left and touch the fix to tie off the stitching.

I used E 16, D15, E15, A 31 (with 5.8 SW), E57 (nothing special). N 15 is terrific and N 14 is okay. L24 is very nice. I tried L13, 14 and 17 and they looked okay until I washed away the stabilizer. Not so good.

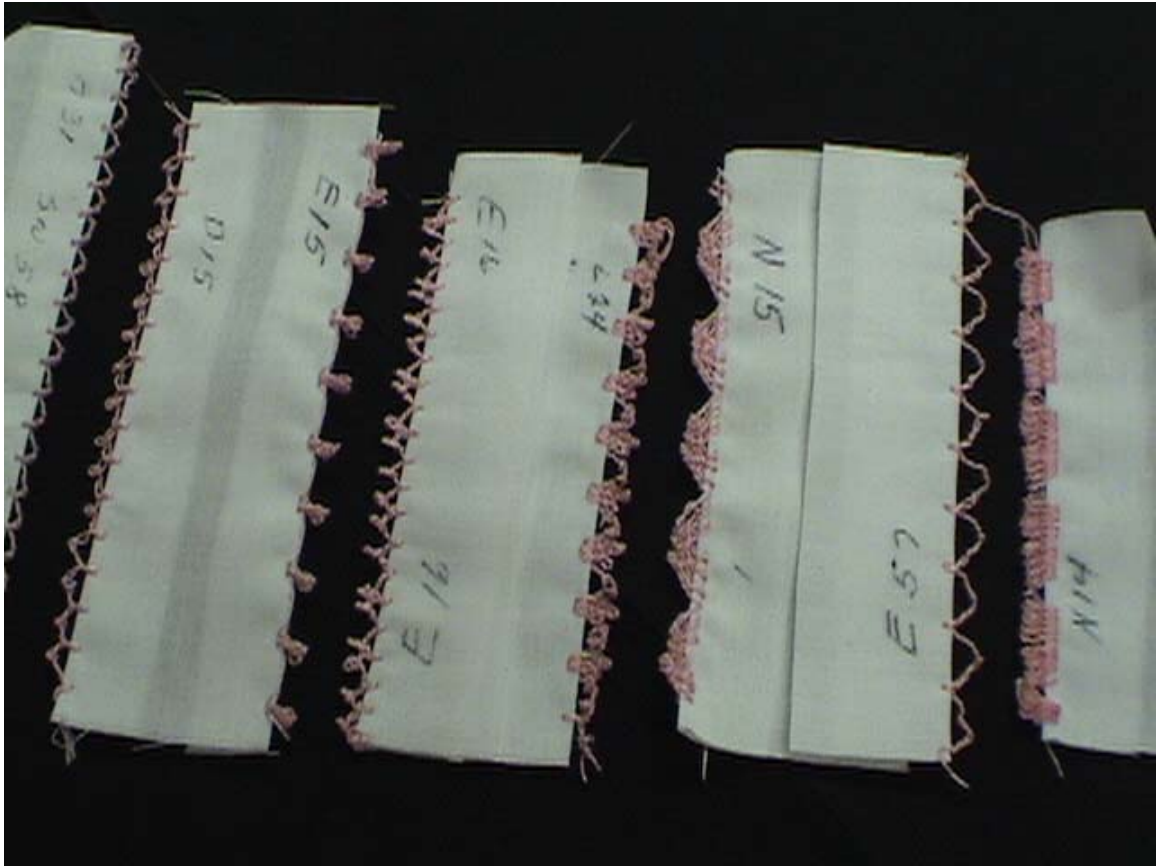

731 50 58

D15

E15

E16

E17

E16

N15

E57

N14